



At a glance

- Expansion modules, Motion Control modules, and gateways for all common fieldbuses
- Configuration data stored in the system plug
- Safe networking of up to 32 Flexi Soft stations
- Integration of sensor cascade
- Multi-language, license-free configuration software: exceptionally simple operation, plausibility check, simulation mode, wiring diagram, parts list, documentation, and data recorder

Your benefits

- Scalable for an efficient and cost-optimized safety application solution
- Cost savings: Flexi Soft offers a modular structure that is in line with your requirements, and thus offers an ideal level of granularity
- Intuitive configuration software featuring comprehensive functions enables continuous monitoring of the configuration
- Rapid verification of the safety application: The configuration software provides documentation and a wiring diagram
- Safety logic is easy to create thanks to ready-made, TÜV-certified function blocks
- The main module's diagnostics interfaces and the configuration storage facility in the system plug enable rapid commissioning, component replacement, and troubleshooting, resulting in minimum downtimes

→ www.mysick.com/en/Flexi_Soft

For more information, just enter the link or scan the QR code and get direct access to technical data, CAD design models, operating instructions, software, application examples and much more.



Ordering information

Other models and accessories → www.mysick.com/en/Flexi_Soft

Main modules

Number of EFI interfaces	Flexi Link	Automatic Configuration Recovery (ACR)	Flexi Line	Model name	Part no.
0	–	–	–	FX3-CPU000000	1043783
2	✓	–	–	FX3-CPU130002	1043784
		✓	–	FX3-CPU230002	1058999
			✓	FX3-CPU320002	1059305

N

Gateways

Fieldbus, industrial network	Model name	Part no.
EtherNet/IP	FX0-GENT00000	1044072
Modbus TCP	FX0-GMOD00000	1044073
PROFINET	FX0-GPNT00000	1044074
EtherCAT	FX0-GETC00000	1051432
PROFIBUS DP	FX0-GPRO00000	1044075
CANopen	FX0-GCAN00000	1044076
DeviceNet	FX0-GDEV00000	1044077

 
I/O modules

Flexi Loop-compatible	Number of safety inputs	Number of non-safe inputs	Number of test signal outputs	Number of safe outputs	Number of non-safe outputs	Model name	Part no.
✓	8	0	2	4	0	FX3-XTIO84002	1044125
			8	0	0	FX3-XTDI80002	1044124
			2	0	4 ... 6	FX3-XTDS84002	1061777
-	0	6 ... 8	0	0	6 ... 8	FX0-STIO68002	1061778

Relay modules

Number of enable current contacts	Number of signalling current contacts	Number of contactor monitoring contacts	Model name	Part no.
2	1	1	UE410-2R04	6032677
4	2	2	UE410-4R04	6032676
2	0	1	UE10-2FG3D0	1043916
			UE12-2FG3D0	1043918

Recommended accessories

	Brief description	Model name	Part no.
Plug connectors and cables			
	For FX3-CPU0 and FX3-CPU1, Storing the system configuration, without EFI-compatible devices	FX3-MPL000001	1043700
	For FX3-CPU2 and FX3-CPU3, Storing the system configuration, including EFI-compatible devices via Automatic Configuration Recovery (ACR)	FX3-MPL100001	1047162
	Head A: male connector, M8, 4-pin, straight Head B: female connector, D-Sub, 9-pin, straight Cable: PVC, unshielded, 2 m For connecting the configuration connection to the serial interface of a PC	DSL-8D04G02M025KM1	6021195
	Head A: male connector, M8, 4-pin, straight Head B: male connector, USB-A, straight Cable: PVC, unshielded, 2 m For connecting the configuration connection to the USB interface on the PC	DSL-8U04G02M025KM1	6034574
	Head A: male connector, M8, 4-pin, angled Head B: cable Cable: TPU, halogen-free, unshielded, 3 m For connecting the configuration connection of a PLC	Connection cable	6036342
	Head A: male connector, USB-A, straight Head B: male connector, Mini-USB, straight Cable: USB, shielded, 3 m	Connection cable (male connector-male connector)	6042517
	Head A: cable Head B: cable Cable: PVC, shielded Fitting for EFI connections	EFI connecting cable	6029448
	Head A: open conductor heads Head B: cable Cable: Flexi Link, shielded	Flexi link cable	6034249