

# SAFETY NOTES

## DANGER

### HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See applicable national standards e.g. NFPA70E, CSA Z462, BS 7671, NFC 18-510.

This equipment must only be installed and serviced by qualified electrical personnel.

Refer to manual for installation and servicing.

The product is not suitable for isolation applications, within the meaning of EN60947-1. Turn off all power supplying this equipment before working on the loads of the equipment.

Turn off all power supplying this equipment before working on equipment.

Always use a properly rated voltage sensing device to confirm power is off.

If on receipt, the unit or any part within is damaged, do not install but contact your supplier.

Do not disassemble, repair or modify the equipment. Contact your supplier for repair.

This product must be installed, connected and used in compliance with prevailing standards and/or installation regulations.

Do not exceed the device's ratings.

The unit must be installed in an enclosure or cabinet connected to the protective earth ground.

Electrically conductive pollution must be excluded from the cabinet in which the product is mounted.

Do not allow anything to fall through the case apertures and ingress the product.

Before any other connection is made, the protective earth ground terminal shall be connected to a protective conductor.

Protective conductor must be sized in compliance with local and national regulatory requirements. Tighten all connections in conformance with the torque specifications. Periodic inspections are required.

High speed fuses (supplemental fuses in addition to branch circuit protective device), as listed in fusing sections, are mandatory to protect EPack against load short circuit.

If opening of either the branch circuit protective device or the high-speed fuses (supplemental fuses) occurs, the product shall be examined by suitably qualified personnel and replaced if damaged.

A High-speed fuse (supplemental fuses in addition to branch circuit protective device) or a double protection fuse as listed in fusing sections is mandatory for 85Vac to 550Vac auxiliary supply.

If opening of any fuses or branch circuit protection device that supply the 85Vac to 550Vac auxiliary supply occurs, check the wiring first. If the wiring is not damaged, do not replace the fuse and contact the manufacturer's local service center.

The maximum voltage between any pole of the 85Vac to 550Vac auxiliary supply and all other terminals shall be lower than 550Vac.

The "24V auxiliary supply" is an SELV circuit. The supply Voltage must be derived from a SELV or PELV circuit.

The I/O Input & Output, the Communications ports are SELV circuit. They must be connected to SELV or PELV circuit.

**Failure to follow these instructions will result in death or serious injury.**

## DANGER

### HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

The relay output and the fuse holders contacts are compliant to the SELV requirements; they can be connected to SELV, PELV circuit or to voltage up to 230V (maximum value of rated operational voltage to earth:230V)

Ensure all cables and wiring harness are secured using a relevant strain relief mechanism.

Respect electrical installation requirements to ensure optimum IP rating.

Close doors and plug-in terminals before turning on power to this equipment.

Use appropriate safety interlocks where personnel and/or equipment hazards exist.

**Failure to follow these instructions will result in death or serious injury.**

## DANGER

### HAZARD OF FIRE

WITHOUT Current limit function by phase angle reduction, if SWIR (Infrared) is NOT selected as Heater type, select the product current rating greater than or equal to the MAXIMUM current of the load.

WITH Current limit function by phase angle reduction, select the product current rating greater than or equal to the nominal current of the load.

Setting of current limit function by phase angle reduction must be lower or equal to product current rating. The current limit function by phase angle reduction is not available with Intelligent Half Cycle (IHC). Select the product current rating greater than or equal to the MAXIMUM current of the load.

Duty cycle current limiting features (in burst mode), does not limit the peak current value. Select the product current rating greater than or equal to the MAXIMUM current of the load.

With SWIR Load, if a fast response time is required, or if IHC firing mode has been selected, select SWIR (Infrared) as Heater type.

If SWIR is selected as Heater type, select the product current rating greater than or equal to 125% of MAXIMUM current of the SWIR load WITHOUT taking in account the inrush current

If SWIR is selected as Heater type, adjust the duration of the safety ramp (SafetyRamp), the cooling time of the load (SWIRLoadCoolingTime) and the value of SWIRLoadCoolingThreshold to limit the RMS load inrush current SWIR to less than 2.5 times the product current rating.

This product does not contain any branch-circuit protection, the installer must add branch-circuit protection upstream of the unit.

Branch circuit protection shall be selected according to maximum current in each phase and must be rated in compliance with local and national regulatory requirements.

Power connections: The cables must be rated 90°C stranded copper only, the cross section must be selected according to the branch circuit protection rating.

For 4S load type WITH Current limit function by phase angle reduction activated on product, the neutral cross-sectional area must be sized to carry up to (√3 x current limit setting).

For 4S load type WITHOUT current limit by phase angle reduction activated on product, the cross-sectional area of the neutral conductor, must be sized to carry the maximum phase current.

The cables used to connect the EPack's auxiliary supply and voltage reference must be protected by branch-circuit protection. Such branch-circuit protection must comply with local and national regulatory requirements.

Connection of two conductors in the same terminal is not permitted, partial or total loss of connection may create an overheat of the terminals.

The conductor stripping length shall be as stated in electrical installation.

**Failure to follow these instructions will result in death or serious injury.**

## DANGER

### HAZARD OF FIRE

Respect mechanical installation requirements to allow heatsink to dissipate power.

At commissioning ensure that under maximum load condition, the ambient temperature of the product will not exceed the limit stated in that manual.

**Failure to follow these instructions will result in death or serious injury.**

## WARNING

### UNINTENDED EQUIPMENT OPERATION

Do not use the product for critical control or protection applications where human or equipment safety relies on the operation of the control circuit.

Signal and power voltage wiring must be kept separate from one another. Where this is impractical, all wires must be rated to the power voltage & shielded cables are recommended for signal wiring.

This product has been designed for environment A (Industrial). Use of this product in environment B (domestic, commercial and light industrial) may cause unwanted electromagnetic disturbances in which cases the installer may be required to take adequate mitigation measures.

For Electromagnetic Compatibility, panel or DIN rail to which product is attached shall be grounded.

Observe all electrostatic discharge precautions before handling the unit.

Ensure physical access to the product is restricted to authorized people only.

At commissioning, ensure cybersecurity robustness of the installation and ensure correct product configuration.

**Failure to follow these instructions can result in death, serious injury or equipment damage.**

## CAUTION

### HOT SURFACE RISK OF BURNS

Allow heatsink to cool before servicing.

Do not allow flammable or heat-sensitive parts in the immediate vicinity of heatsink.

**Failure to follow these instructions can result in injury or equipment damage.**

## NOTICE

### North America (NA) Regulations

For USA & Canada EPack 125A fuse holder terminal capacity is rated UL 1/0AWG, this may decrease the maximum Load current according to standard, ambient temperature, wiring arrangement.

**Failure to follow these instructions can result in non-compliance to NA regulations**

# EPack™

## 3 Phase Power Controller



### DVD CONTENTS AND INSTALLATION

**Product documentation.** The documentation on this DVD is in PDF format which requires the use of a suitable reader to view it. The English language version of the latest version of Adobe Acrobat for Microsoft® Windows® may be installed from this DVD.

### DOCUMENTATION

EPack 3 phase Controller User Guide HA033541

Eurotherm: International sales and support [www.eurotherm.com](http://www.eurotherm.com)

Contact Information Eurotherm Head Office Faraday Close, Durrington, Worthing, West Sussex, BN13 3PL Sales Enquiries T +44 (01903) 695888

Worldwide Offices [www.eurotherm.com/worldwide](http://www.eurotherm.com/worldwide) General Enquiries T +44 (01903) 268500



Scan for local contacts



Eurotherm

by Schneider Electric

HA032906ENG Issue 3 Jan 2021 CN38904

© Copyright Eurotherm Limited 2021

Eurotherm by Schneider Electric, the Eurotherm logo, Chessell, EurothermSuite, Mini8, Eycon, Eyris, EPower, EPack, nanodac, piccolo, versadac, optivis, Foxboro and Wonderware are trademarks of Schneider Electric, its subsidiaries and affiliates. All other brands may be trademarks of their respective owners.


All rights are strictly reserved. No part of this document may be reproduced, modified, or transmitted in any form by any means, nor may it be stored in a retrieval system other than for the purpose to act as an aid in operating the equipment to which the document relates, without the prior written permission of Eurotherm Limited. Eurotherm Limited pursues a policy of continuous development and product improvement. The specifications in this document may therefore be changed without notice. The information in this document is given in good faith, but is intended for guidance only. Eurotherm Limited will accept no responsibility for any losses arising from errors in this document.

## Electrical Installation

Connections are summarized below for quick reference—Do not attempt electrical installation without referring to the EPack Controller User Guide HA033541 for full details.


### Supply and Load Wiring

A 125A EPack is shown below. Units for other current ratings are of similar appearance and are wired in the same manner. This diagram does not show the necessary external fuses that are required for branch circuit & short circuit protection.

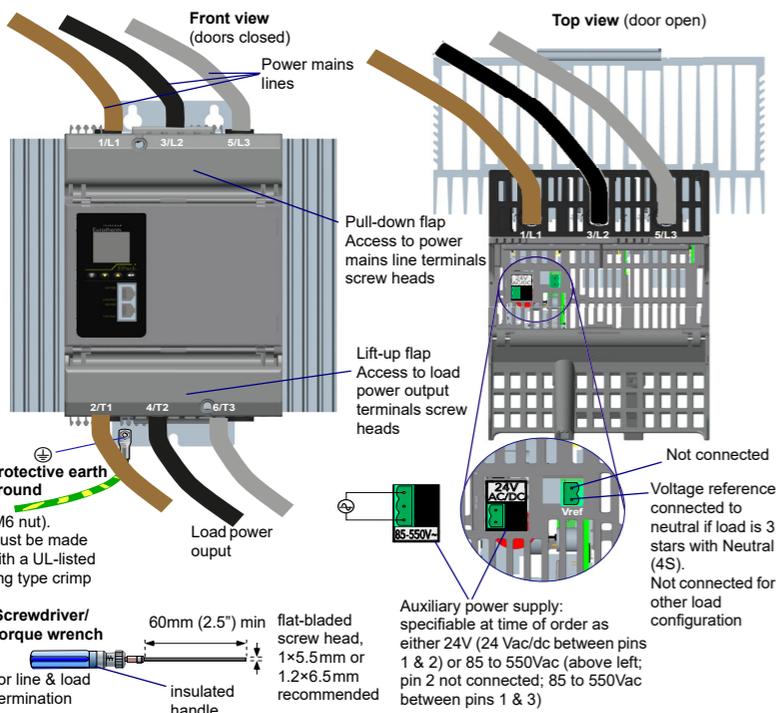

### I/O Wiring

A 63A EPack is shown below. Units for other current ratings are of similar appearance and are wired in the same manner. Use a 0.6 x 3.5 mm screwdriver for pluggable connectors.

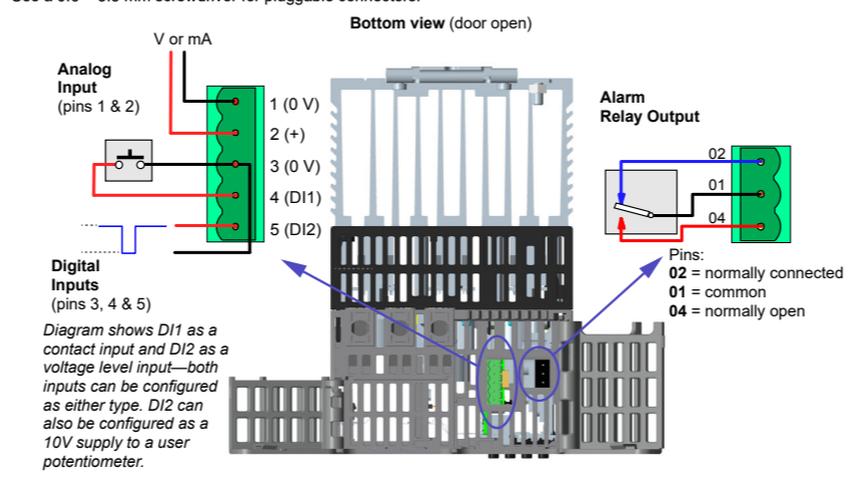

Analog Input	Digital Inputs	Relay Output
Use the <b>Adjust &gt; Ana_in</b> type menu to configure the input range as 0 to 10V, 1 to 5V, 2 to 10V, 0 to 5V, 0 to 20mA or 4 to 20mA. Selecting a mA range automatically places a suitable shunt resistor in the circuit, there is no need for the user to fit external components.	Absolute maxima for externally applied signals: ±30V or ±25mA  Contact input ranges: open: 800Ω to ∞ undefined: 450Ω to 800Ω closed: 0Ω to 450Ω Source current 10mA min, 15mA max.	Voltage level input ranges: high: +11V to +30V (with current greater than 6mA) low: -3V to +5V (with current 2mA to 30mA), or +5V to +11V (with current of 2mA)  User potentiometer supply (DI2 only): 10.2V±2%, 10mA; pot. range: 2kΩ to 10kΩ ±20%
		switching characteristics (resistive loads): V <sub>max</sub> = 264V RMS V <sub>min</sub> = 5V dc, I <sub>max</sub> = 2A RMS, I <sub>min</sub> = 10mA.

### Connection Details

Terminals	Product rating	Terminal capacity <sup>a</sup> mm <sup>2</sup> AWG	Wire Type	Torque	Comments
Supply voltage (1/L1, 3/L2, 5/L3) and Load supply (2/T1, 4/T2, 6/T3)	16A to 63A	1.5mm <sup>2</sup> to 25mm <sup>2</sup>	AWG 14 to AWG 4	2Nm (18lb in)	P22 or Flat-bladed screwdriver 5.5 x 1.0mm (7/32in x 0.039in) or 6.5 x 1.2mm (1/4in x 0.047in)
	80A to 125A	10mm <sup>2</sup> to 50mm <sup>2</sup>	AWG 8 to AWG 2/0	5.6Nm (50lb in)	Flat-bladed screwdriver 5.5 x 1mm (7/32in x 0.039in) or 6.5 x 1.2mm (1/4in x 0.047in)
Protective earth ground	16A to 63A	M6 ring-type crimp terminal		2.5Nm (22lb in)	U.L.: Listed ring-type crimp terminal must be used
	80A to 125A	M6 ring-type crimp terminal		5.6Nm (50lb in)	U.L.: Listed ring-type crimp terminal must be used
Voltage Reference (Vref) (2-ways/1 connected)	All	0.25mm <sup>2</sup> to 2.5mm <sup>2</sup>	AWG 24 to AWG 12	0.56Nm (5lb in)	Flat bladed screwdriver 3.5 x 0.6mm (1/8in x 0.0236in)
Supply (24Vac/dc) (2-way)					
Supply (85V-550Vac)(3-way)					
I/O connector (5-way)					
Relay connector (3-way)					

a. AWG (American Wire Gauge) for USA and Canada (according to cUL standard); section in mm<sup>2</sup> for IEC countries (according to IEC/EN standard).

<sup>†</sup> SELV is defined (in IEC60947-1) as an electrical circuit in which the voltage cannot exceed 'ELV' under normal conditions or under single fault conditions, including earth ground faults in other circuits. The definition of ELV is complex as it depends on environment, signal frequency, etc. See IEC 61140 for further details.

The I/O connector (5-way) & auxiliary supply (24V ac/dc) (2-way) are compliant to the SELV requirements. The alarm relay output and the fuse holder contacts are compliant to the SELV requirements; they can be connected to SELV or to voltage up to 230V (Rated insulation voltage U<sub>i</sub>; 230V)

# TECHNICAL SPECIFICATION STANDARDS

This product is designed and produced to comply with:

Countries	Standard symbol	Standard details
European community		EN60947-4-3:2014 (identical to IEC60947-4-3:2014). Low-voltage switchgear and controlgear - Part 4-3: Contactors and motor-starters - AC semiconductor controllers and contactors for non-motor loads. Declaration of conformity available on request.
USA and Canada		USA: UL60947-4-1 Canada: CAN/CSA C22.2 NO.60947-4-1-14 Low-Voltage Switchgear and Controlgear - Part 4-1: Contactors and Motor-Starters – Electromechanical Contactors and Motor-Starters. U.L. File N° E86160.
Australia		Regulatory Compliance Mark (RCM) to Australian Communication and Media Authority. Based on compliance to EN60947-4-3:2014.
China	/	Product not listed in catalog of products subject to China Compulsory Certification (CCC)


## INSTALLATION CATEGORIES

Overvoltage category	Rated impulse withstand voltage (U <sub>imp</sub> )	Rated insulation voltage (U <sub>i</sub> )	Maximum value of rated operational voltage to earth
Communication	II	0.5 kV	50V
Standard IO	II	0.5 kV	50V
Relays	III	4 kV	300V
Module power	III	6 kV	300V

Weight	16 to 32A units	3060g + user connectors
	40 to 63A units	3510g + user connectors
	80 to 100A units	5830g + user connectors
	125A units	7940g + user connectors

## Mechanical Installation

Product dimensions are summarised below for quick reference—Do not attempt mechanical installation without referring to the EPack Controller User Guide HA033541 for full details  
The diagram below shows a 63A EPack (doors open), other low current units are similar— refer to Table 1 for dimensions.

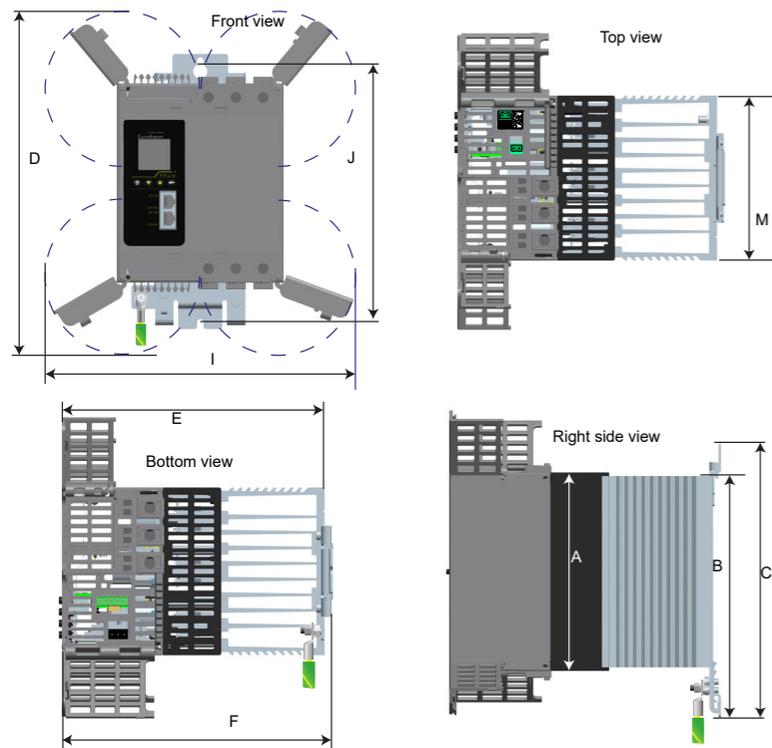

## EMC

EMC immunity tests EN60947-4-3:2014  
EMC emission tests EN60947-4-3:2014

## Auxiliary supply

Frequency range: 47 to 63Hz  
Rated control supply voltage (Us): 24V ac/dc (+20% -20%), or 100 to 500V (+10% -15%)  
Power requirement: 24Vdc: 12W  
24Vac: 18VA  
500Vac: 20VA

## Power

Frequency range: 47 to 63Hz  
Rated operational voltages (U<sub>e</sub>): 100 to 500V (+10% -15%)  
Rated operational currents (I<sub>e</sub>): 16 to 125A  
Power Dissipation: 1.3W per Ampere, per phase  
Short circuit protection: By external supplemental fuses (high speed fuse) See User Manual HA033541

Rated conditional short-circuit current: 100kA (co-ordination type 2)

Utilization categories (Load types)  
AC-51: Non-inductive or slightly inductive loads, resistance furnaces  
AC-55b: Switching of incandescent lamps  
AC-56a: Transformer Primary

Duty cycle: Uninterrupted duty / continuous operation  
Device form: Designation Form 4 (Semiconductor controller)

Heater types: Low/high temperature coefficient and non-aging/aging types: MOSI Molybdenum Silicide, Silicon Carbide, Carbon.

Overload conditions: AC-51: 1 x I<sub>e</sub> continuous  
AC-55b: 1 x I<sub>e</sub> continuous  
AC-55b: 2.5 x I<sub>e</sub> - 100ms  
AC-56a: 1 x I<sub>e</sub> continuous

## Operator Interface

Display: 1.5" square TFT colour display allowing viewing of selected parameter value in real time, plus configuration of instrument parameters for users with adequate access permission

Pushbuttons: Four push buttons provide page and item entry and scroll facilities

## Environment

Temperature limits: Operating: 0°C to 45°C at 1000m  
0°C to 40°C at 2000m  
Storage: -25°C to 70°C  
Altitude: 1000m maximum at 45°C  
2000m maximum at 40°C  
Humidity limits: 5% to 95% RH (non-condensing)  
Atmosphere: Non-explosive, non-corrosive, non-conductive  
Pollution degree: Pollution degree 2


Degree of protection (CE): All units IP 20 (EN60529)  
Enclosure type ratings (UL): All units Open type  
External wiring General: Must comply with IEC60364-1 and IEC60364-5-54 and all applicable local regulations.  
UL: Must comply with NEC and all applicable local regulations.  
Cross sections must comply with NEC, Article 310 Table 310-16.  
External wiring temperature rating: Power conductors: 90°C, other wires 75°C,  
Shock: According to EN60068-2-27 and IEC60947-1 (Annex Q, Category E)  
Vibration (EN60068-2-6): According to EN60068-2-27 and IEC60947-1 (Annex Q, Category E)

## Communications Wiring


Two Ethernet (10/100 base-T autosensing) ports **P1** and **P2** are located on the front face of the unit. Both ports accept RJ45 connectors with pin-outs as below:

Pin	Signal
8	Not used
7	Not used
6	Rx-
5	Not used
4	Not used
3	Rx+
2	Tx+
1	Tx-

LEDs:  
Green = Tx activity  
Yellow = Connected

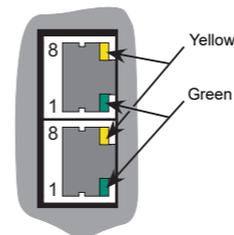

The diagram below shows a 125A EPack (doors open), 80 and 100A units are similar— refer to Table 1 for dimensions.

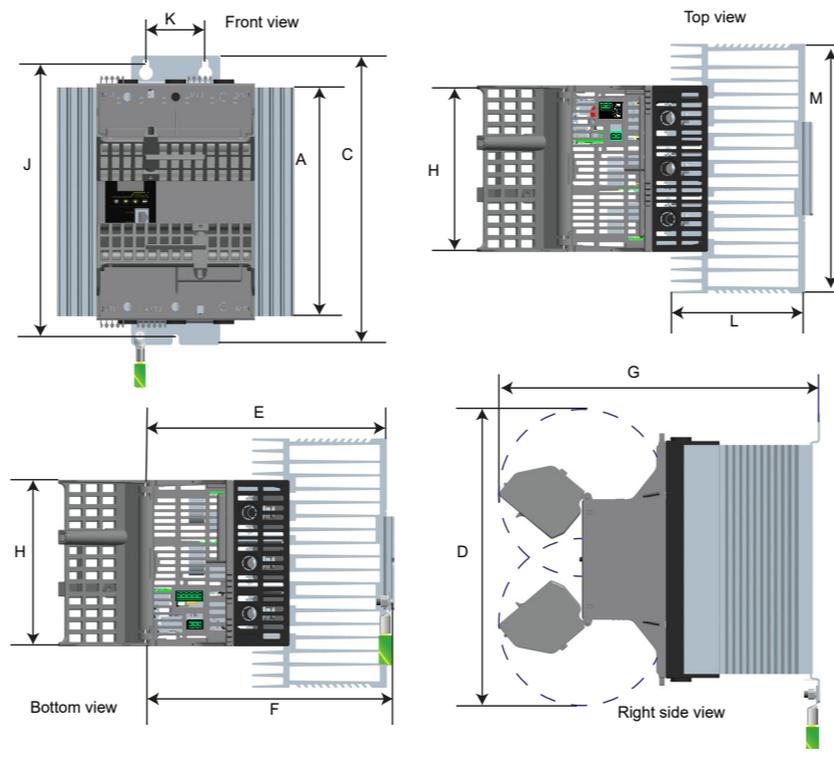

## Symbols

One or more of the symbols below may appear as part of the instrument labelling

	Protective conductor		Risk of electric shock
	AC supply only		Precautions against static electrical discharge must be taken when handling this unit
	Underwriters laboratories listed mark for Canada and US		Refer to manual for instructions
	Do not touch heatsink, Hot Surface		CE mark. Indicates compliance with the appropriate European Directives
	EAC (EurAsian Conformity) customs union mark of conformity		Regulatory compliance mark (RCM) to Australian Communication and Media Authority

## China RoHS

The data shown here is related to the China RoHS 2.0 Administrative Measures for the Restriction of Hazardous Substances in Electric Appliances and Electronic Products released 7th Dec 2017

Part Name Part Name	Hazardous Substances					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
金属材料 Metal parts	0	0	0	0	0	0
塑料部件 Plastic parts	0	0	0	0	0	0
电子元件 Electronic	X	0	0	0	0	0
触点 Contacts	0	0	0	0	0	0
线缆和线缆附件 Cables & cabling accessories	0	0	0	0	0	0

本表格依据SJ/T11364的规定编制。  
O: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。  
X: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。

This table is made according to SJ/T 11364.  
O: indicates the concentration of hazardous substance in all of the homogeneous materials for this part is below the limit stipulated in GB/T 26572.  
X: indicates concentration of hazardous substance in at least one of the homogeneous materials used for this part is above the limit stipulated in GB/T 26572.

Signed (Kevin Shaw, R&D Director):

*Kevin Shaw*

Date: 7th December 2017

IA029470U745 Issue 5

December 2017

Table 1 Dimensions for EPacks of different current ratings (all values in millimetres)

Label	Dimension	16–32A	40–63A	80–100A	125A
A	Height	166	166	230	230
B	with DIN Rail	213.5	213.5	not applicable	not applicable
C	with wallmount backplate	229.5	229.5	291	291
D	with doors open	290	290	310	310
E	Depth	185	220	235	235
F	with backplate	192	227	242	242
G	with doors open†	not applicable	not applicable	325	325
H	Width	140	140	160	160
I	with doors open†	265	265	not applicable	not applicable
J	Wall-mounting (top to bottom)	219	219	277	277
K	Wall-mounting (across top bracket)	not applicable	not applicable	60	60
L	Heatsink depth	55	90	97	130
M	Heatsink width	140	140	160	240

† for low current EPacks (16A to 63A) doors open to the side, increasing the effective width of the unit. For high current EPacks (80A to 125A) doors open towards the front, increasing the effective depth of the unit. In both cases, opening the doors requires additional clearance above and below the unit.

## Mounting

- Low current units (16A to 63A) may be mounted on two horizontal, parallel 7.5mm or 15mm DIN rails, or wall-mounted on a bulkhead by fitting the supplied upper mounting bracket (which features a single mounting hole)
- High current units (80A, 100A and 125A) must be wall-mounted on a bulkhead. The upper mounting bracket features two mounting holes (see entry K in Table 1).