## Photo-electric sensor - Compact design




# **ECOLAB**





BlueLight

(Example)

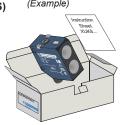







http://qr.tesensors.com/XU0020

Scan the code to access this Instruction Sheet in different languages and all the product information or you can visit our website at: www.telemecaniquesensors.com

We welcome your comments about this document. You can reach us through the customer support page on your local

- Disconnect all power before servicing equipment.

  Do not connect this device to AC power.
- The power voltage must not exceed the rated range.

Failure to follow these instructions will result in death or serious injury.

# WARNING

- HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

   Disconnect all power before servicing equipment.

  IMPROPER SETUP OR INSTALLATION

   This equipment must only be installed and serviced by qualified personnel.
  - Read, understand, and follow the compliance below, before installing the XU Photo-electric sensor.
  - Do not tamper with or make alterations on the unit
  - Comply with the wiring and mounting instructions.


  - Check the connections and fastening during maintenance operations.

    The proper functioning of the XU Photo-electric sensor and its operating line must be checked regularly and according to the application (for example number of operations, level of environmental pollution, etc.).

0.91

Failure to follow these instructions can result in death, serious injury, or equipment damage.

#### Mounting and tightening torques

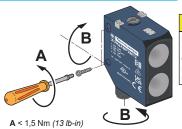

#### **CAUTION**

DEGREE OF PROTECTION DETERIORATION Do not apply excessive torque on the sensor during the installation process.


Failure to follow these instructions can result in injury or equipment damage.

# **LEDs and Setting** Output status LED Power ON LED (yellow) (1) (green) Sensitivity Control



**Dimensions** mm in. 0.17 1.97 0.08 507 5.8/0.23 Ø4,3/0.17 15,6 9 M12x1 0.55 4 (a) Receiver optical axis (b) Transmitter optical axis


# **B** < 1 Nm (8.85 lb-in) Wiring diagrams

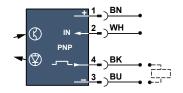







#### **Alignment** Maximum angle tolerance

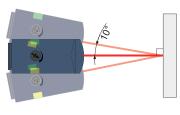


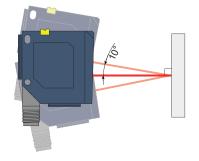

### Switching mode for object

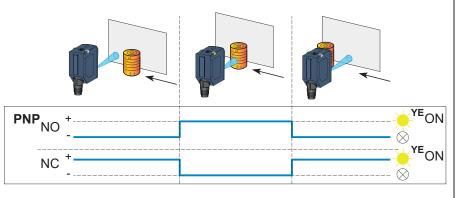

## Mounting, wiring and maintenance precautions

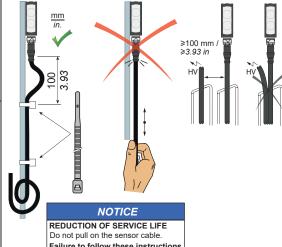

# Failure to follow these instructions can result in equipment damage.




068-15057



Electrical equipment should be installed, operated and maintained only by qualified personnel. Neither TMSS France nor any of its subsidiaries or other affiliated companies shall be responsible or liable for any consequences arising out of the use of this material. Telemecanique<sup>TM</sup> Sensors is a trademark of Schneider Electric Industries SAS used under license by TMSS France. Any other brands or trademarks referred to in this document are property of TMSS France or, as the case may be, of its subsidiaries or other affiliated companies. All other brands are trademarks of their respective owners.



### **Detection curves**

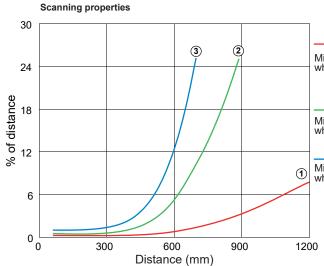

Min distance white object (90%) / white background (90%) (mm)

Min distance grey object (18%) / white background (90%) (mm)

Min distance black object (6%) / white background (90%) (mm)

Light beam diameter 50 40 Ø -30 -40 -50<sub>0</sub> 1200 400 800 Sensing distance (mm)

#### Pre-wired connectors (examples)

PVC cable for general use PUR cable for severe industrial environments

Jumper



Jumper


M12 - 4 pins plug M12 - 4 pins socket XZCRB151151C2 2m PUR XZCRB151151C5 5m PUR

M12 - 4 pins plug M8 - 4 pins socket XZCR1509041J1 1m PUR XZCR1509041J2 2m PUR


For other cables (angled or length) visit our website: www.telemecaniquesensors.com

**Accessories** 



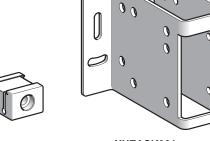




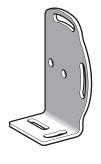

XUZASK001 XUZASW001

XUZASW002

XUZA51S

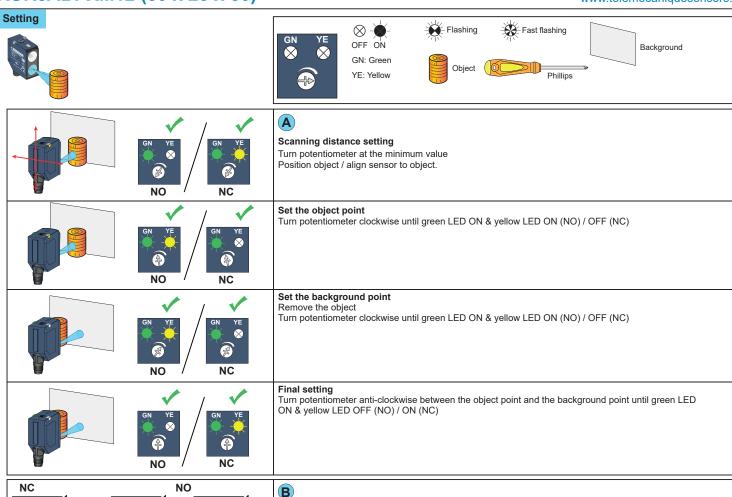

#### Characteristics

Certification		CE - UKCA - cULus - Ecolab
Sensing distance W	/hite	31200 mm / 0.1247.2 in
Gi	rey	5750 mm / 0.229.5 in
ВІ	lack	10600 mm / 0.3923.6 in
Sensing distance setting		Potentiometer
Color of detection light beam		LED, blue, 450 nm - Risk group 2 according to EN62471
Spot size of the light beam		See light beam diameter curve
Output type		PNP (NO or NC)
Current consumption		≤ 30 mA
Switching capacity		≤ 100 mA
Switching frequency		≤ 600 Hz
First-up delay		< 300 ms
Response time		830 µs max.
Recovery time		300 ms max.
Ambient Temperature	Operating	- 20+60 °C (-4+140 °F) - UL: max. +45 °C / 113°F
	Storage	- 20+80 °C (-4+176 °F)
Power Voltage		Rated operational voltage: 1224 Vdc Operating range: 1030 Vdc (including ripple p-p 10% maximum)
Product Protection		Power supply: Reverse polarity protection Output: Short circuit protection
Protection against electric shocks		☐ Protection class II
Degree of protection		IP67 conforming to IEC 60529, IP69K conforming to DIN 40050-9
Vibration resistance		Conforming to EN 60947-5-2
Shock resistance		Conforming to EN 60947-5-2
Permitted cable length		100 m / 328.1 ft
Material		Housing: ABS/PC, Lens: PMMA
Factory Setting		Scanning distance = 500 mm (6%) and NO

(3)

**(** 



#### **A** CAUTION EYE INJURY DUE TO HAZARDOUS OPTICAL RADIATION

Do not stare at the beam.
 Avoid any eye contact with the beam.
 Failure to follow these instructions can result in injury or equipment damage.

Manufacturer: TMSS France
Tour Eqho - 2 avenue Gambetta
92400 Courbevoie



UK Representative: Yageo TMSS UK Limited 2 North Park Road Harrogate, HG1 5PA United Kingdom

NO/NC Setting

+ = NC - = NO Open = NO

Setting via control input IN (PIN 2)